

DI

CASIO

PQ-40U

Manual Guide / Warranty Certificate
Certificado de propietario / Certificado de garantía
使用说明书 / 保証書
دليل الاستخدام / شهادة الضمان

1/6


7/12

13/18

19/24

Reading the display

[Front panel]

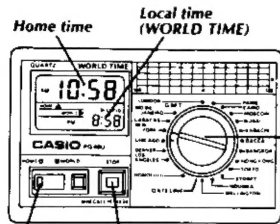

Home time

Local time
(WORLD TIME)

Dial
Turning the dial
knob changes
the local time
(WORLD TIME)
one hour per city.


Alarm time recall button

Shows preset alarm time when button is pressed.

Display changeover switch

Switches between two time displays, upper and lower.

[Back panel]

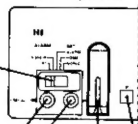

Slide selector

Back stand

Hour advance
button

Minute advance button

All reset switch

(press after battery change)

Setting home time

- 1) Set the slide selector to "HOME".
- 2) By pressing the H and M button, set the correct hour and minute digits. Keep pressed for quick advance.
Each press of the M button resets the second digits to zero.
- 3) Each press of the alarm time recall button alternates the time display between the 12-hour and the 24-hour format.
- 4) Move the slide selector to "OFF" or "SNZ".

Setting local time

- 1) Set the slide selector to "WORLD".
- 2) Turn the dial knob to your home time zone.
- 3) Press the H and M button to set the correct hour and minute digits.
The second digits are synchronized with home timekeeping.
- 4) Move the slide selector to "OFF" or "SNZ".


Setting alarm time

When the time on the upper display coincides with the preset alarm time, the buzzer sounds 4 times for one minute at intervals of 5 minutes at and after the preset time every day, and sounds for 5 minutes until the slide selector is moved to the "OFF" position.

- 1) Set the slide selector to "ALARM".
(The alarm time display starts flashing.)
- 2) Press the H and M button to set the correct hour and minute digits.
- 3) Move the slide selector to "SNZ".

Changing to daylight saving time

Turn the dial knob one point to right.

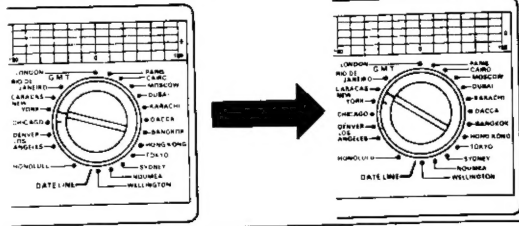

Battery replacement

When battery power decreases the whole display darkens. Battery should then be renewed.

- 1) Open the back panel of the unit by loosening the screws with a screwdriver. Slide open the battery cover.
- 2) Remove dead battery.
- 3) Insert new battery with polarities as indicated.
- 4) Replace the battery cover and the back panel. Screw carefully.

**Never leave dead battery in the battery compartment to prevent the chance of malfunctions due to battery leakage.*

CAUTION

Be sure to insert the battery with correct polarities (+, -) to prevent the possibility of battery burst.

Care of your unit

- Since the unit contains precise electronic components, never attempt to disassemble it.
 - Be careful not to drop the unit or handle it roughly.
 - Avoid operating the buttons and selectors roughly.
 - Avoid using the unit in extreme temperatures (below 32°F or 0°C, or above 104°F or 40°C).
- Also protect the unit from extremely dusty or humid conditions.
- Never use volatile fluids such as lacquer thinner, benzine, etc. when cleaning the unit.

Specifications

Accuracy at normal temperature: ± 3 seconds per day

Display capacity:

(Upper display) Hours, minutes, second (by flash), am/pm

(Lower display) Hours, minutes, second (by flash), am/pm

Time system: Changeover between 12-hour and 24-hour formats

Local times: London (GMT 0), Paris (GMT + 1), Cairo (GMT + 2), Moscow (GMT + 3)
Dubai (GMT + 4), Karachi (GMT + 5), Dacca (GMT + 6), Bangkok (GMT + 7), Hong Kong (GMT + 8), Tokyo (GMT + 9), Sydney (GMT + 10),
Noumea (GMT + 11), Wellington (GMT + 12), Honolulu (GMT - 10),
Los Angeles (GMT - 8), Denver (GMT - 7), Chicago (GMT - 6), New York
(GMT - 5), Caracas (GMT - 4), Rio de Janeiro (GMT - 3)

**Daily alarm with snooze function*

Battery: One lithium battery (Type: CR-2025C)

Approx. one year operation on type CR-2025C

Dimensions: 58.4H \times 94.9W \times 9.5mmD

Weight: 49g

Warranty Certificate

THIS WARRANTY CERTIFICATE IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.

Should this timepiece malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase. If the timepiece requires service within the warranty period, request repair or adjustment at the store where purchased or the authorized Casio timepiece distributor, presenting the timepiece together with this warranty certificate. The customer shall not have any claim under this warranty for repair or adjustment expenses if:

- (1) The trouble is caused by improper, rough or careless treatment.
- (2) The trouble is caused by a fire or other natural calamity.
- (3) The trouble is caused by improper repair or adjustment made by anyone other than the authorized Casio timepiece distributor or its retailers.
- (4) The case, glass or battery is damaged or worn.
- (5) This warranty certificate is not presented when requesting service.
- (6) The name and address of the authorized distributor or the retailer are not stamped in the warranty certificate.
- (7) The date of purchase, model name and manufacturing number are not entered in the warranty certificate.